

# Instruction Manual

## Drystar® GV80 Dry Vacuum Pumps



Description	Electrical Supply	Item Number
GV80 Dry Vacuum Pump	380/400 V 50 Hz, 230/460 V 60 Hz	A70216940/9773513283
GV80 Dry Vacuum Pump	200 V 50 Hz, 200/380 V 60 Hz	A70216934
GV80 Dry Vacuum Pump PFPE Prepared	380/400 V 50 Hz, 230/460 V 60 Hz	A70217940
GV80 Dry Vacuum Pump PFPE Prepared	200 V 50 Hz, 200/380 V 60 Hz	A70217934

Original Instructions



## Copyright notice

©Edwards Limited 2021. All rights reserved.

## Trademark credits

Edwards and the Edwards logo are trademarks of Edwards Limited, Innovation Drive, Burgess Hill, West Sussex RH15 9TW.

## Disclaimer

The content of this manual may change from time to time without notice. We accept no liability for any errors that may appear in this manual nor do we make any expressed or implied warranties regarding the content. As far as practical we have ensured that the products have been de-signed and constructed to be safe and without risks when properly installed and used in accordance with their operating instructions.

We accept no liability for loss of profit, loss of market or any other indirect or consequential loss whatsoever.

Product warranty and limit of liability are dealt with in our standard terms and conditions of sale or negotiated contract under which this document is supplied.

You must use this product as described in this manual. Read the manual before you install, operate, or maintain the product.

This page has been intentionally left blank.

## EU Declaration of Conformity

**Edwards Ltd**

Innovation Drive  
Burgess Hill  
West Sussex  
RH15 9TW  
UK

**Documentation Officer**

Jana Sigmunda 300  
Lutín , 78349  
Czech Republic  
T: +42(0) 580 582 728  
[documentation@edwardsvacuum.com](mailto:documentation@edwardsvacuum.com)

The product specified and listed below

A702-16-940 / 9773513283	Drystar GV80 Dry Vacuum Pumps (EU,US,CN)
A702-16-934	Drystar GV80 Dry Vacuum Pumps (Asia)
A702-17-940	Drystar GV80 Dry Vacuum Pumps PTFE prepared (EU,US,CN)
A702-17-934	Drystar GV80 Dry Vacuum Pumps PTFE prepared (Asia)

Is in conformity with the relevant requirements of European CE legislation:

2006/42/EC	Machinery directive <i>Note: The safety objectives of the Low Voltage Directive 2014/35/EU were complied with in accordance with Annex 1 No. 1.5.1 of this directive.</i>
2011/65/EU	Restriction of certain hazardous substances (RoHS) directive as amended by Delegated Directive (EU) 2015/863

Based on the relevant requirements of harmonised standards:

EN 1012-2:1996 +A1:2009	Compressors and vacuum pumps. Safety requirements. Vacuum pumps
EN 60034-1:2010	Rotating electrical machines. Rating and performance

This declaration, based on the requirements of the listed Directives and EN ISO/IEC 17050-1, covers all product serial numbers from this date on: *2021-08-24*

You must retain the signed legal declaration for future reference  
This declaration becomes invalid if modifications are made to the product without prior agreement.



*Andries De Bock – VP Engineering  
Industrial Vacuum Division  
Cologne*



*Jan Vecera – General Manager  
Product Company Lutín*



## Declaration of Conformity

**Edwards Ltd**

Innovation Drive  
Burgess Hill  
West Sussex  
RH15 9TW  
UK

**Documentation Officer**

[documentation@edwardsvacuum.com](mailto:documentation@edwardsvacuum.com)

This declaration of conformity is issued under the sole responsibility of the manufacturer.

A702-16-940 / 9773513283	Drystar GV80 Dry Vacuum Pumps (EU,US,CN)
A702-16-934	Drystar GV80 Dry Vacuum Pumps (Asia)
A702-17-940	Drystar GV80 Dry Vacuum Pumps PTFE prepared (EU,US,CN)
A702-17-934	Drystar GV80 Dry Vacuum Pumps PTFE prepared (Asia)

The object of the declaration described above is in conformity with relevant statutory requirements:

Supply of Machinery (Safety) Regulations 2008

The objectives of the Electrical Equipment (Safety) Regulations 2016 are governed by Annex 1 1.5.1 of this regulation.

Electrical Equipment (Safety) Regulations 2016

Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Relevant designated standards or technical specifications are as follows:

EN 1012-2:1996 +A1:2009      Compressors and vacuum pumps. Safety requirements. Vacuum pumps

EN 60034-1:2010                Rotating electrical machines. Rating and performance

This declaration, based on the requirements of the listed Statutory Instruments and EN ISO/IEC 17050-1, covers all product serial numbers from this date on: 2021-08-24

You must retain the signed legal declaration for future reference

This declaration becomes invalid if modifications are made to the product without prior agreement.

**Signed for and on behalf of Edwards Ltd**

*Andries De Bock – VP Engineering  
Industrial Vacuum Division  
Cologne*



*Jan Vecera – General Manager  
Product Company Lutín*

## ADDITIONAL LEGISLATION AND COMPLIANCE INFORMATION

### RoHS (EU, UK): Material Exemption Information

This product is compliant with the following Exemptions

Annex III:

- 6(a) **Lead** as an alloying element in steel for machining purposes and in galvanised steel containing up to 0,35 % lead by weight
- 6(b) **Lead** as an alloying element in aluminium containing up to 0.4% by weight
- 6(c) Copper alloy containing up to 4% **lead** by weight

### REACH (EU, UK)

This product is a complex article which is not designed for intentional substance release. To the best of our knowledge the materials used comply with the requirements of REACH. The product manual provides information and instruction to ensure the safe storage, use, maintenance and disposal of the product including any substance based requirements.

### Article 33.1 Declaration (EU, UK)

This product contains Candidate List Substances of Very High Concern above 0.1%ww by article as clarified under the 2015 European Court of Justice ruling in case C-106/14.

- Lead (Pb)  
This substance is present in certain brass components.

### WASTE FRAMEWORK DIRECTIVE (EU)

SCIP Number: fe0936ba-5ce7-464e-8493-d4969a371542

## Compliance Information – incorporated products and assemblies

Motors	2009/125/EC Ecodesign directive requirements for energy-related products <i>To 1 July 2021:</i> Regulation (EC) No 640/2009 requirements for electric motors <i>From 1 July 2021:</i> Regulation (EU) No 2019/1781 electric motors and variable speed drives <i>Based in the requirements of harmonised standard:</i> EN 60034-30:2009: Rotating electrical machines -- Part 30: Efficiency classes of single-speed, three-phase, cage-induction motors (IE-code)
Fans	2009/125/EC Ecodesign directive requirements for energy-related products Regulation (EU) No 327/2011: Industrial fans driven by motors


## Additional Applicable Requirements

The product is in scope for and complies with the requirements of the following:

2012/19/EU                      Directive on waste electrical and electronic equipment (WEEE)

材料成分声明

China Material Content Declaration

部件名称 Part name 	有害物质 Hazardous Substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr VI)	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
铸铝及铝合金制品 Aluminium alloys	x	o	o	o	o	o
铜管管件 Brass pipe fitting	x	o	o	o	o	o
铜接头 Brass connectors	x	o	o	o	o	o
电机 (泵和机械增压泵) Motors (pump and mechanical booster)	x	o	o	o	o	o
<p>O: 表示该有害物质在该部件的所有均质材料中的含量低于 GB/T 26572 标准规定的限量要求。 O: Indicates that the hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.</p> <p>X: 表示该有害物质在该部件的至少一种均质材料中的含量超出 GB/T26572 标准规定的限量要求。 X: Indicates that the hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.</p>						

This page has been intentionally left blank.



# Contents

Section	Page
<b>1</b>	<b>Introduction ..... 1</b>
1.1	Scope and definitions ..... 1
1.2	The GV pumps ..... 1
1.3	Gas system ..... 2
1.3.1	Cooling system ..... 4
1.4	Motor over-temperature protection ..... 4
1.5	Liquid pumping capability ..... 4
1.6	Safe area operation ..... 4
1.7	Accessories ..... 4
<b>2</b>	<b>Technical data ..... 5</b>
2.1	General ..... 5
2.2	Materials of construction ..... 6
2.3	Services ..... 9
2.4	Cooling system ..... 10
2.5	Lubrication system ..... 10
2.5.1	Gearbox ..... 10
2.5.2	High vacuum bearings ..... 10
2.6	Area classification in accordance with BS 5345 ..... 10
<b>3</b>	<b>Installation ..... 11</b>
3.1	Safety ..... 11
3.2	Unpack and inspect ..... 11
3.3	Locate the pump ..... 12
3.4	Check the gearbox oil-level ..... 12
3.5	Electrical connections ..... 13
3.5.1	Introduction ..... 14
3.5.2	Connect to the pump-motor terminal-box ..... 14
3.5.3	Connect to the thermal snap-switches ..... 15
3.6	Check the direction of pump rotation ..... 17
3.7	Fit a mechanical booster pump (optional) ..... 17
3.8	Connect the cooling-water supply ..... 17
3.9	Connect the shaft-seals purge and gas-ballast gas supplies ..... 18
3.9.1	Introduction ..... 18
3.9.2	Connect the shaft-seals purge air or nitrogen supply ..... 18
3.9.3	Connect a nitrogen gas-ballast supply (optional) ..... 19
3.10	Connect the pump-inlet and pump-outlet ..... 20
3.10.1	Connect the pump to your process system ..... 20
3.10.2	Connect the pump-outlet ..... 21
3.11	Leak test the installation ..... 21
3.12	Commission the pump ..... 22
<b>4</b>	<b>Operation ..... 23</b>
4.1	Start the pump ..... 23
4.2	Check the purge pressures and flows ..... 24
4.3	Shut down the pump ..... 24
<b>5</b>	<b>Maintenance ..... 25</b>
5.1	Safety ..... 25
5.2	Maintenance plan ..... 25

5.3	Check the gearbox oil-level and fill the gearbox with oil (if necessary) .....	26
5.4	Inspect the gas-ballast system .....	27
5.5	Inspect the pipelines and connections .....	27
5.6	Change the gearbox oil and clean the oil-level sight-glass .....	29
5.7	Relubricate the high vacuum bearings .....	30
5.8	Flush the cooling jacket .....	32
5.9	Replace the gas ballast filter .....	32
5.10	Replace the pump-motor bearings .....	33
5.11	Overhaul the pump .....	33
5.12	Fault finding .....	34
<b>6</b>	<b>Storage and disposal .....</b>	<b>35</b>
6.1	Storage .....	35
6.2	Disposal .....	35
<b>7</b>	<b>Service, spares and accessories .....</b>	<b>37</b>
7.1	Introduction .....	37
7.2	Service .....	37
7.2.1	Return the equipment or components for service .....	37
7.3	Spares and maintenance kits .....	37
7.4	Accessories .....	38
7.4.1	Exhaust silencer .....	38
7.4.2	Booster connection kit .....	38
7.4.3	Indirect cooling kit .....	38
7.4.4	Acoustic enclosure .....	38
7.4.5	Other accessories .....	38
<b>Appendix A1</b>	<b>Correct use of Swagelok connectors .....</b>	<b>39</b>
A1.1	Fit a Swagelok connector .....	39
A1.2	Reconnect a Swagelok connector .....	39

## Illustrations

<b>Figure</b>		<b>Page</b>
1	The GV pump .....	3
2	Dimensions .....	8
3	Schematic diagram of the recommended electrical connections .....	13
4	Connect to the thermal snap-switches .....	16
5	Oil-level sight-glass and oil filler port .....	28
6	Relubricate the high vacuum bearings .....	31
A1	Fit a Swagelok fitting .....	40
A2	Retighten a Swagelok fitting .....	41

## Tables

Table	Page
1 General data .....	5
2 Materials of construction .....	6
3 Technical data: 50 Hz electrical supplies .....	6
4 Technical data: 60 Hz electrical supplies .....	6
5 Service data .....	9
6 Electrical data .....	9
7 Cooling system data .....	10
8 Gearbox lubrication data .....	10
9 Bearing lubrication data .....	10
10 Checklist of components .....	12
11 Maintenance plan .....	26
12 Fault finding .....	34
13 Spares and maintenance kits .....	37
14 Exhaust silencer .....	38
15 Booster connection kit .....	38
16 Indirect cooling kit .....	38
17 Acoustic enclosure .....	38

## Associated publications

Publication title	Publication number
Vacuum pump and vacuum system safety	P40040100

This page has been intentionally left blank.

# 1 Introduction

## 1.1 Scope and definitions

This manual provides installation, operation and maintenance instructions for the Edwards GV80 Dry Vacuum Pump (abbreviated to GV pump in the remainder of this manual). You must use the GV pump as specified in the manual.

Read this manual before you install and operate the GV pump. Important safety information is highlighted as WARNING and CAUTION instructions; you must obey these instructions. The use of WARNINGS and CAUTIONS is defined below.



### WARNING

Warnings are given where failure to observe the instruction could result in injury or death to people.

---

### CAUTION

Cautions are given where failure to observe the instruction could result in damage to the equipment, associated equipment and process

---

The following IEC warning labels appear on the pump:



Warning - refer to accompanying documentation.



Warning - risk of electric shock.



Warning - hot surface.

The units used throughout this manual conform to the SI international system of units of measurement.

*Note:* Refer to Figure 1 in the descriptions in the following sections.

## 1.2 The GV pumps

The GV pumps are rugged, reliable dry vacuum pumps designed for general vacuum use

The pump is a three-stage, positive displacement rotary pump in which pairs of intermeshing rotors (mounted on common shafts) are held in correct phase relation by a pair of timing-gears. The timing-gears and the adjacent double-row angular contact ball bearings are oil lubricated.

The pump has lifting-bolts (1) and is mounted on a robust frame (9). Fixing holes (10) in the frame can be used to secure the pump frame in its operating position.

### 1.3 Gas system


The pump has a shaft-seals purge system and a gas-ballast system.

You can connect a dry compressed air supply to the shaft-seals purge inlet (18). The shaft-seals purge pipeline then delivers the dry air purge to the shaft-seals. This dry air purge: ensures that the shaft-seals are maintained at a positive pressure during pump operation; prevents the entry of corrosive or toxic process vapours into the pump gearbox; prevents contamination of the process gases by pump oil; prevents damage to the shaft-seals by debris.

As supplied, the gas-ballast system can deliver ambient air to the pump gas-ballast inlet. The air-flow is filtered and is controlled by a valve (13). A check-valve in the system prevents the escape of process gases out of the gas-ballast system into the local atmosphere.

If required for your application, you can connect dry nitrogen supplies to the pump, to deliver nitrogen gas-ballast and nitrogen shaft-seals purge instead of air: refer to [Section 3.9](#).

Figure 1 - The GV pump

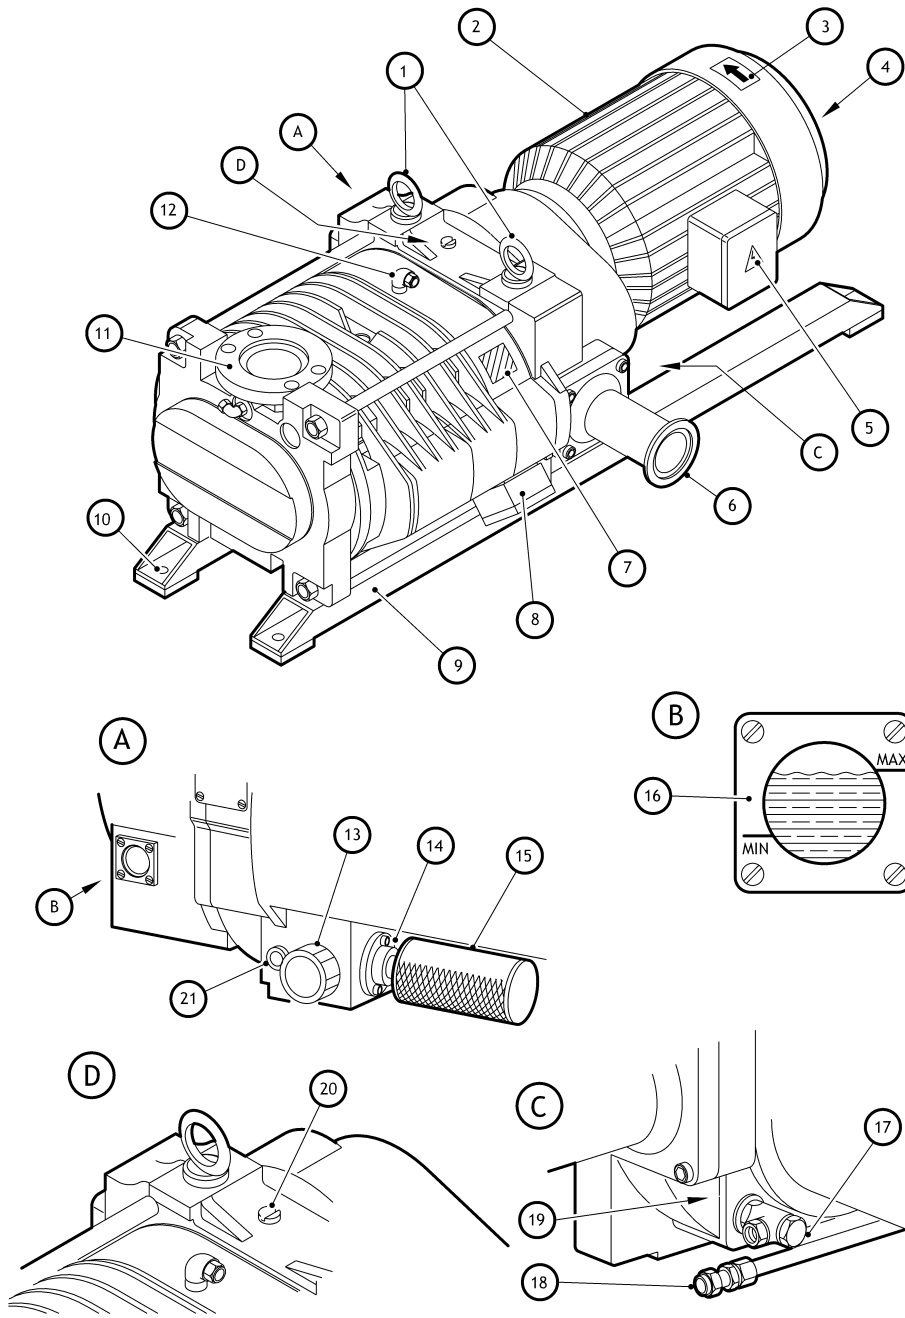

- |                                  |                             |
|----------------------------------|-----------------------------|
| 1. Lifting-bolts                 | 12. Cooling-water outlet    |
| 2. Pump-motor                    | 13. Gas-ballast flow valve  |
| 3. Direction of rotation arrow   | 14. Gas-ballast inlet       |
| 4. Cooling-fan                   | 15. Air filter              |
| 5. Terminal-box                  | 16. Oil-level sight-glass   |
| 6. Pump-outlet                   | 17. Cooling-water inlet     |
| 7. Temperature measurement point | 18. Shaft-seals purge inlet |
| 8. Thermal snap-switch box       | 19. Outlet-flange O-ring    |
| 9. Pump frame                    | 20. Air bleed plug          |
| 10. Fixing hole                  | 21. TCV probe port          |
| 11. Pump-inlet                   |                             |

dcx/8268/001

### 1.3.1 Cooling system

**Note:** The direct cooling system fitted to the pump is suitable for pump operating temperatures (measured at the position shown in [Figure 1](#), item 7) of up to 45 °C, (113 °F). If your application requires pump operating temperatures of 45 to 90 °C (113 to 194 °F), we recommend that you fit an Indirect Cooling Kit accessory: refer to [Section 7.4.3](#).

The pump has a direct cooling system, in which cooling-water (connected through the cooling water inlet, 17) circulates around the pump-body and then passes out of the pump through the cooling-water outlet (12). The pump-motor (2) is air-cooled by an integral cooling-fan (4).

The thermal snap-switch box (8) on the pump-body has two thermal snap-switches:

- The output of the warning thermal snap-switch will go open circuit when the temperature of the pump-body is higher than normal. Use this output to provide a warning of high pump temperature.
- The output of the shut-down thermal snap-switch will go open circuit when the temperature of the pump-body is too high. Use this output to shut-down the pump when it is too hot.

## 1.4 Motor over-temperature protection

A motor-protection thermistor is fitted to the pump-motor. This thermistor is a solid-state device which has a low electrical resistance at normal pump-motor operational temperature. When the pump-motor is too hot, the electrical resistance of the thermistor rises quickly. You can connect the outputs of the thermistor to your control equipment to shut down the pump if the pump-motor is too hot.

## 1.5 Liquid pumping capability

The GV pump cannot survive the ingress of liquid (after a process failure condition, for example) without damage. If you want to pump liquids, contact your supplier or Edwards for advice.

## 1.6 Safe area operation

You must not use the GV pump in the following hazardous areas:

- Zone 0, Zone 1 or Zone 2 (gases), or Zone Z (10) or Zone Y (11) (dusts), as classified by European authorities.
- Division 1 or Division 2 (gases and dusts), as classified by North American authorities.

These hazardous areas require the use of flame-proof equipment. If you need a pump which can operate in these areas, contact your supplier or Edwards for advice.

## 1.7 Accessories

A number of accessories are available for the GV pumps; use these to configure the pump for specific applications. These accessories are listed in [Section 7](#).



## 2 Technical data

### 2.1 General

**Table 1 - General data**

Parameter	Data
Dimensions	Refer to <a href="#">Figure 2</a>
Mass	Refer to <a href="#">Table 3</a> and <a href="#">4</a>
Pump-motor rating	Refer to <a href="#">Table 3</a> and <a href="#">4</a>
Full load and no-load current ratings	Refer to <a href="#">Table 6</a>
Typical pump rotation speed	
50 Hz electrical supply	3000 rev.min <sup>-1</sup>
60 Hz electrical supply	3600 rev.min <sup>-1</sup>
Warm-up time to pump operating temperature of 40 °C (104 °F), with a cooling-water flow rate of 150 l.h <sup>-1</sup> (33 US gallons.h <sup>-1</sup> )	15 min
Pump-inlet connection	ISO40
Pump-outlet connection	NW40
Recommended pump-inlet seal	Fluoroelastomer trapped O-ring
Recommended pump-outlet seal	Fluoroelastomer trapped O-ring
Ambient operating temperature range	0 to 40 °C, 32 to 104 °F
Maximum ambient operating humidity	100 % RH
Maximum outlet pressure	1.3 bar absolute, 1.3 x 10 <sup>5</sup> Pa, 975 torr
Swept volume maximum pressure rating	11 bar absolute, 1.1 x 10 <sup>6</sup> Pa, 8250 torr
Typical continuous A-weighted sound pressure level	Refer to <a href="#">Table 3</a> and <a href="#">4</a>
Performance	Refer to <a href="#">Table 3</a> and <a href="#">4</a>

## 2.2 Materials of construction

Table 2 - Materials of construction

Component	Material
Rotors	Grey cast iron, grade 250
Stators	Grey cast iron, grade 250
Shafts	Carbon steel 817 M40
Sleeves	Stainless steel 431 S29
Bearing holders	Stainless steel 410 C21
Inlet flange	Carbon steel
Outlet flange	Grey cast iron, grade 250
Gearbox	Grey cast iron, grade 250
Coupling cover	Grey cast iron, grade 250
O-rings	Fluoroelastomer
Shaft seals	Carbon filled PTFE (polytetrafluoroethylene)
Timing gears	Carbon steel 817 M40

Table 3 - Technical data: 50 Hz electrical supplies

Parameter	Data
Mass (with A07115096 electric motor, without silencer <sup>*</sup> )	157 kg/346.13 lb
Mass (with A07115098 electric motor, without silencer <sup>*</sup> )	167 kg/368.17 lb
Pump-electrical motor rating (A07115096)	4 kW/5.4 hp
Pump-electrical motor rating (A07115098)	4 kW/5.4 hp
Typical continuous A-weighted sound pressure level <sup>†</sup>	< 78 dB (A)
Maximum pumping speed	82 m <sup>3</sup> h <sup>-1</sup>
Displacement (swept volume)	91.5 m <sup>3</sup> h <sup>-1</sup>
Ultimate vacuum	3 x 10 <sup>-2</sup> mbar 3 Pa
Typical heat removed from pump by cooling-water	1.1 kW
Maximum water consumption <sup>‡</sup>	1 l.min <sup>-1</sup>

<sup>\*</sup> Mass of silencer is 6 kg/13.23 lb.

<sup>†</sup> The noise level was measured in accordance with ISO2151 and with the pump running at ultimate pressure. Running at higher inlet pressures will increase the noise level.

<sup>‡</sup> Pump at typical operating temperature of 44 °C, at ultimate vacuum with a cooling-water supply temperature of 28 °C and an ambient temperature of 20 °C.

Table 4 - Technical data: 60 Hz electrical supplies

Characteristics	Units
Mass (with A07115096 electric motor, without silencer <sup>*</sup> )	346.13 lb/157 kg
Mass (with A07115098 electric motor, without silencer <sup>*</sup> )	368.17 lb/167 kg
Pump-electrical motor rating (A07115096)	5.4/5 <sup>†</sup> hp, 4/3.7 <sup>†</sup> kW
Pump-electrical motor rating (A07115098)	5.4/5 <sup>†</sup> hp, 4/3.7 <sup>†</sup> kW
Typical continuous A-weighted sound pressure level	< 80 dB (A)

Table 4 - Technical data: 60 Hz electrical supplies



Maximum pumping speed	64.6 ft <sup>3</sup> min <sup>-1</sup>
Displacement (swept volume)	53.8 ft <sup>3</sup> min <sup>-1</sup>
Ultimate vacuum	2.25 x 10 <sup>-2</sup> Torr
Typical heat removed from pump by cooling-water	3412 BTU
Maximum water consumption <sup>‡</sup>	17.5 US gallons h <sup>-1</sup>

\* Mass of silencer is 13.23 lb/6 kg.

† NEMA Premium Efficiency (NPE), equivalent to IE3 efficiency class.

‡ Pump at typical operating temperature of 111 °F, at ultimate vacuum with a cooling-water supply temperature of 82 °F and an ambient temperature of 68 °F.

Figure 2 - Dimensions

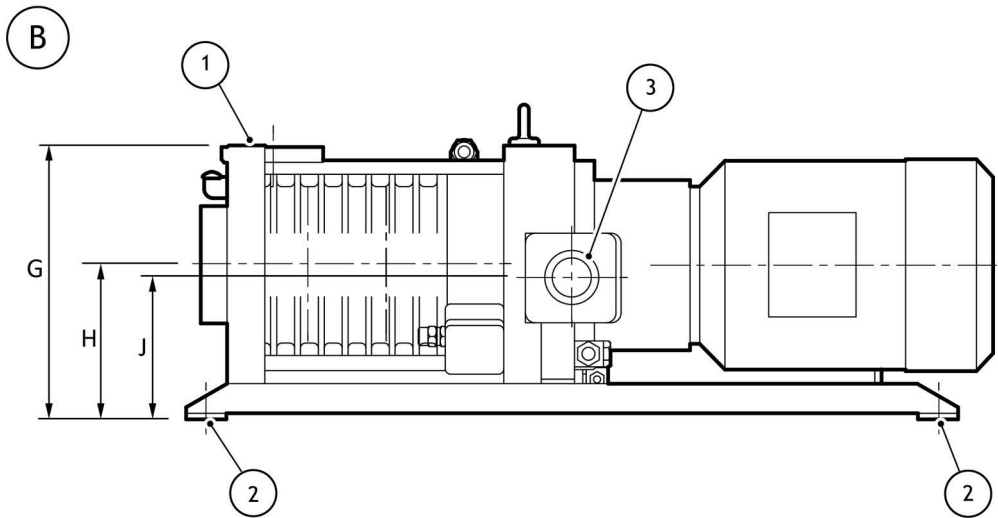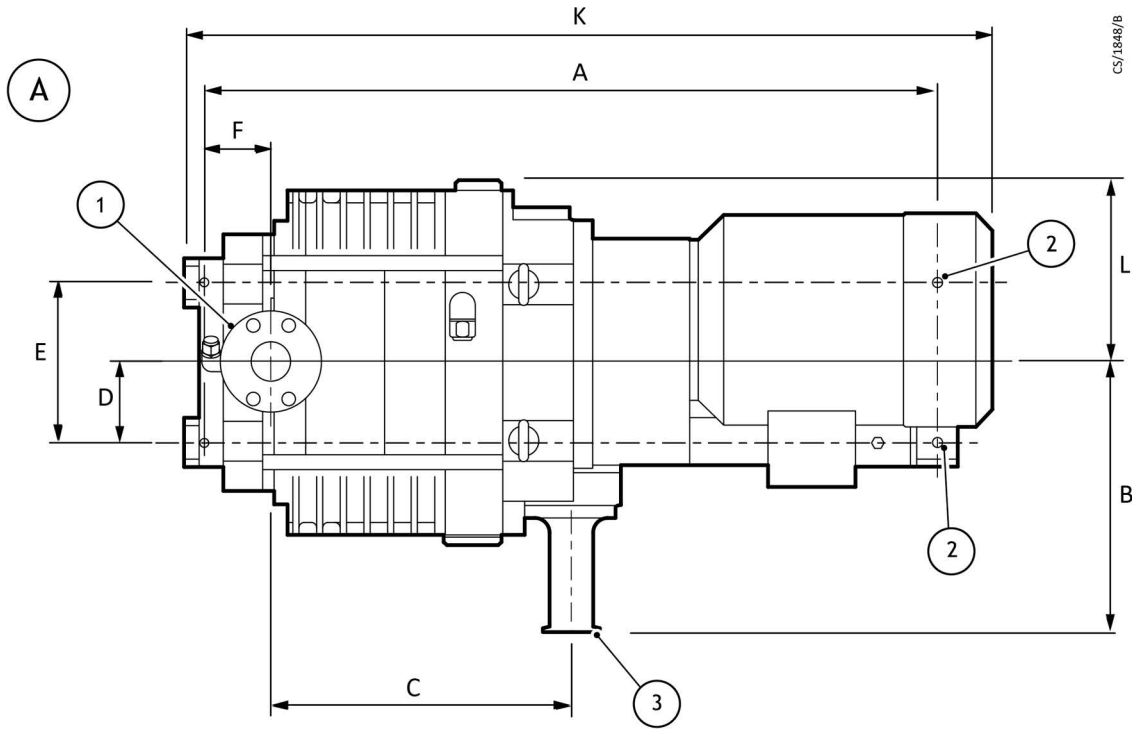

- A Top view
- B Side view
- 1. Pump-inlet
- 2. Fixing holes:  $\varnothing 9$  mm, 0.35 inches
- 3. Pump-outlet

Electrical Supply	Units	A	B	C	D	E	F	G	H	J	K	L
50 Hz	mm	737	270	301	80	160	67	275	156	143	858	184
60 Hz	inches	29	10.63	11.85	3.15	6.30	2.64	10.83	6.14	5.63	33.78	7.24

## 2.3 Services

**Table 5 - Service data**

Service	Data
Electrical supply	Refer to the motor rating plate for voltage and wiring details
Cooling-water supply*	
Supply temperature range	5 to 35 °C, 41 to 95 °F
Maximum supply pressure	8 bar absolute, $8 \times 10^5$ Pa, 116 psi, $5.99 \times 10^3$ torr
Minimum required pressure differential across supply and return	2.1 bar absolute, $2.1 \times 10^5$ Pa, 30 psi, $1.55 \times 10^3$ torr
Typical heat removed from pump	Refer to <a href="#">Table 3</a> and <a href="#">4</a>
Maximum water consumption	Refer to <a href="#">Table 3</a> and <a href="#">4</a>
Maximum particle size in supply	$0.03 \text{ mm}^2$ , $4.65 \times 10^{-5}$ inch <sup>2</sup>
Fittings type, suitable for	1/2 inch outside diameter rigid tube
Shaft-seals purge nitrogen supply	
Minimum supply pressure	0.3 bar gauge, 1.3 bar absolute, 4.35 psi gauge, $1.3 \times 10^5$ Pa, $9.75 \times 10^2$ torr
Maximum supply pressure	0.8 bar gauge, 1.8 bar absolute, 11.6 psi gauge, $1.8 \times 10^5$ Pa, $1.35 \times 10^3$ torr
Maximum flow rate	$25 \text{ l}\cdot\text{min}^{-1}$ , $0.88 \text{ ft}^3\text{min}^{-1}$
Fittings type, suitable for	1/4 inch outside diameter rigid tube

\* Edwards do not recommend the use of de-ionised waters in the GV80 pumps.

**Table 6 - Electrical data**

Electrical supply [V]	Frequency [Hz]	Efficiency class	Electrical motor item number	Power [hp]	Power [kW]
230	60	IE3/NPE*	A07115096	5.4/5*	4.00/3.7*
460	60	IE3/NPE*	A07115096	5.4/5*	4.00/3.7*
380/415	50	IE3	A07115096	5.4	4.00
400	50	IE3	A07115096	5.4	4.00
200	60	IE3/NPE*	A07115098	5.4/5*	4.00/3.7*
380	60	IE3/NPE*	A07115098	5.4/5*	4.00/3.7*
200	50	IE3	A07115098	5.4	4.00

\* NEMA Premium Efficiency (NPE), equivalent to IE3 efficiency class.

## 2.4 Cooling system

Table 7 - Cooling system data

Parameter	Data
Cooling system type	Direct water-cooling
Cooling-water requirements	Refer to Section 2.3 and Table 3 and 4
Thermal snap-switches	
Warning thermal snap-switch	
Opening temperature	88 °C, 190 °F
Closing temperature	78 °C, 172 °F
Shut-down thermal snap-switch	
Opening temperature	95 °C, 203 °F
Closing temperature	85 °C, 185 °F
Contact ratings	
Maximum voltage	60 V d.c., 25 V a.c.
Maximum current (inductive load) *	0.2 A (d.c. voltage), 1 A (a.c. voltage)

\* Protective extra low voltage.

## 2.5 Lubrication system

**Note:** Edwards Material Safety Data Sheets for the recommended oil and grease referenced in the sections below are available on request.

### 2.5.1 Gearbox

Table 8 - Gearbox lubrication data

Parameter	Data
Gearbox oil capacity	0.4 litres, 0.1 US gallons
Recommended oil *	Mobil SHC 629 Antiwear Synthetic Gear Oil 150 cst
Recommended PFPE oil	Fomblin 25/6

\* The pump is supplied filled with this oil. Pump operating temperature is measured at the point shown in Figure 1, item 7. For pump operating temperatures higher than 45 °C (113 °F), we recommend that you fit an Indirect Cooling Kit: refer to Section 7.4.3.

### 2.5.2 High vacuum bearings

Table 9 - Bearing lubrication data

Parameter	Data
Grease type	Perfluoropolyether
Recommended grease	Fomblin RT15

## 2.6 Area classification in accordance with BS 5345

Standard pumps

Safe Area designation only

## 3 Installation

### 3.1 Safety



#### WARNING

Obey the safety instructions given below and take note of appropriate precautions. If you do not, you can cause injury to people and damage to equipment.

- A suitably trained and supervised technician must install your GV pump.
- Ensure that you comply with all local and national safety requirements when you install the pump. In the US, make the wiring connections to the pump-motor in accordance with the US National Electrical Code.
- Ensure that the installation technician is familiar with the safety procedures which relate to the products pumped. Wear the appropriate safety-clothing when you come into contact with contaminated components. Dismantle and clean contaminated components inside a fume-cupboard.
- Vent and purge the process system before you start installation work.
- Check that all the required components are available and of the correct type before you start.
- Disconnect the other components in the process system from the electrical supply so that they cannot be operated accidentally.
- Do not reuse O-rings if they are damaged.
- Ensure that you connect, disconnect and tighten Swagelok connectors correctly: refer to [Appendix A1](#).
- Ensure that the distance between electrical motor fan cover and the wall/obstacle in front of that cover is at least 25 mm (necessary for securing enough air flow through the electrical motor and its cooling).

### 3.2 Unpack and inspect



#### WARNING

Use suitable lifting-equipment to move the pump. Refer to [Section 2](#) for the pump mass.

1. Use a fork-lift truck or a pallet truck to place the pallet in a convenient position.
2. Remove the cardboard sleeve which covers the pump, then remove the protective foil bag from around the pump.
3. Inspect the equipment. If the pump or any of the other items is damaged, notify your supplier and the carrier in writing within three days; state the Item Number of the pump together with your order number and your supplier's invoice number. Retain all packing materials for inspection. Do not use the pump if it is damaged.
4. Check that you have received the items listed in [Table 10](#). If any of these items is missing, notify your supplier in writing within three days.
5. If the pump is not to be used immediately, replace the packing materials. Store the pump in suitable conditions as described in [Section 6](#).

Table 10 - Checklist of components

Qty	Description	Check (3)
1	GV pump	<input type="checkbox"/>
Fittings kit, which contains:		
1	Swagelok nut: 1/2 inch	<input type="checkbox"/>
1	Swagelok ferrule: 1/2 inch	<input type="checkbox"/>
1	Swagelok nut: 1/4 inch	<input type="checkbox"/>
1	Swagelok ferrule: 1/4 inch	<input type="checkbox"/>
1	NW40 clamping ring	<input type="checkbox"/>
1	NW40 trapped O-ring	<input type="checkbox"/>

### 3.3 Locate the pump



**WARNING**

Use suitable lifting-equipment to move the pump. Refer to [Section 2](#) for the mass of the pump.

**Note:** *If you want to operate the pump in an environment with an ambient temperature of 0 °C (32 °F) or lower, contact your supplier or Edwards for advice.*

*Ensure that the cooling-air flow around the pump-motor is not restricted.*

1. Refer to [Figure 1](#). Remove from the fixing-holes (10) the four nuts and bolts which secure the pump frame (9) to the pallet.
2. Attach suitable lifting-equipment to the two lifting bolts (1) to move the pump.
3. Locate the pump on a firm, level surface. Ensure that the surface is clean and free from debris and contamination (such as oil). Use suitable bolts through the four fixing-holes (10) to secure the pump in position.
4. In addition, ensure that the location of the pump and the intended routing of connecting parts i.e. process line, exhaust line and power cables will not present any physical hazards, for example; trip hazards to personnel.

### 3.4 Check the gearbox oil-level

Refer to [Figure 1](#). The pump is supplied filled with oil. Before you operate the pump, check that the gearbox oil-level is correct: the oil-level must be between the MIN and MAX marks on the bezel of the oil-level sight-glass (16): refer to detail B. If necessary, pour more oil into the gearbox: refer to [Section 5.3](#).




### 3.5 Electrical connections



**WARNING**

Ensure that the electrical installation of your pump conforms with your local and national safety requirements. The pump must be connected to a suitably fused and protected electrical supply and a suitable earth (ground) point.

Figure 3 - Schematic diagram of the recommended electrical connections

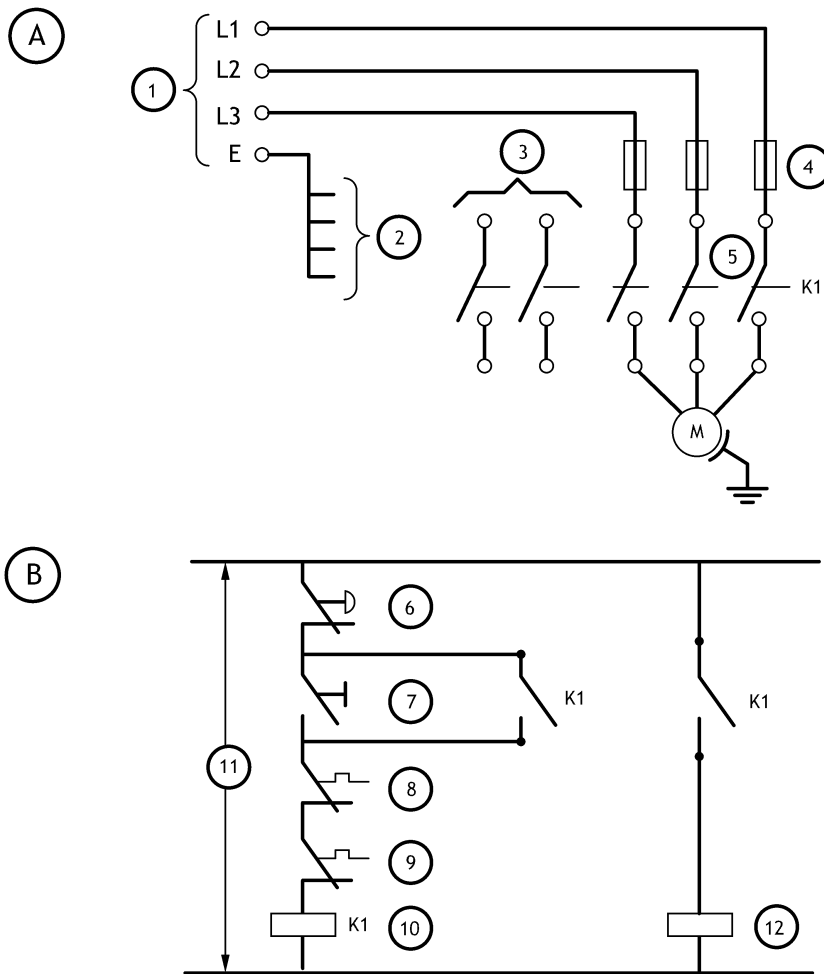

- 1. To your electrical supply
- 2. Earth (ground) points
- 3. Auxiliary contacts (2 off, normally closed)
- 4. Fuse or circuit breaker
- 5. Contactor K1 contacts
- 6. Stop control
- 7. Start control
- 8. Shut-down thermal snap-switch
- 9. Pump-motor thermistor contacts
- 10. Contactor K1 drive coil
- 11. Control voltage
- 12. Inlet-valve control solenoid (optional)

- A. Pump-motor connections
- B. Control circuit

Earth (ground) points	
Location	Size
Thermal snap-switch box	M4 tapped hole
Pump-motor	*

\* Refer to the pump-motor terminal-box.

dcs/8248/003

### 3.5.1 Introduction

We recommend that you connect the electrical supply to the pump through a suitable starter or circuit breaker which has thermal over-current protection and a thermistor control module which complies with EN 60034-11. You must adjust the over-current protection to suit your installation, the full-load current ratings are shown on the motor rating plate. The fuse ratings must be calculated by a qualified person. The supplier of your thermal over-current protection device may specify fuse ratings to ensure correct operation of the over-current protection device. Ensure that the fuse you use is suitable for the starting currents of your installation.

The pump will restart automatically when the electrical supply is restored after it has been interrupted. If you do not want the pump to automatically restart, connect the electrical supply to the pump-motor through control equipment which must be manually reset after an electrical supply interruption.

Refer to [Figure 1](#). Note that there are earth (ground) points in the pump-motor terminal-box (5) and in the thermal snap-switch box (8).

### 3.5.2 Connect to the pump-motor terminal-box

---

#### CAUTION

**Ensure that the pump-motor terminal box is correctly configured for your electrical supply. If the terminal-box is not correctly configured, you can damage the pump-motor when you operate it.**

---

The bottom of the pump-motor terminal-box has a number of cable-entry leadthrough holes, sealed by plugs; you can connect to the terminal-box in one of two ways:

- You can use a single 6-core cable to connect the electrical supply to the pump-motor terminals and to connect the outputs of the motor protection thermistor to your control equipment. If you use this option, remove the plug from one of the cable-entry leadthrough holes.
- You can use a 4-core cable to connect the electrical supply to the pump-motor terminals, and use a 2-core cable to connect the outputs of the motor protection thermistor to your control equipment. If you use this option, remove the plugs from two of the cable-entry leadthrough holes.

Use the following procedure to make the electrical connections to the pump-motor terminal box:

1. Remove the cover from the pump-motor terminal-box ([Figure 1](#), item 5).
2. Remove the plug (s) from the cable-entry leadthrough hole(s) that you intend to use from the bottom of the terminal-box.
3. Fit suitable cable-gland (s) and nut(s) to the entry hole (s), then pass the cable (s) through the cable-gland (s) and tighten the cable-gland (s). The cable-gland (s) you use must be rated to provide seal protection of IP55 (in IEC 529) or better to the terminal-box.
4. Ensure that the terminal-box is correctly configured for your electrical supply voltage, as indicated by the motor supplier's information. This will be on the rating plate or in the terminal box.
5. Connect the earth (ground) wire in your cable to the earth (ground) terminal (4).
6. Connect the other ends of the phase conductors and the earth (ground) wire to your electrical supply.
7. Connect the two thermistor wires in your cable to the terminals on the thermistor block.
8. Connect the other end of the thermistor wires to your control equipment.
9. Tighten the cable-gland nut (s) strain-relief screws and refit the terminal-box cover.

### 3.5.3 Connect to the thermal snap-switches



#### WARNING

You must connect the shut-down thermal snap-switch so that the pump stops when the thermal snap-switch opens. If you do not, there may be a risk of fire or explosion.



#### WARNING

Incorporate a manual reset device in your control equipment. If you do not (and a fault which causes the shut-down thermal snap-switch to open is not corrected), the pump will automatically switch on again when it cools down. If you have started maintenance or fault finding on the pump, there will then be a risk of fire or explosion and injury to people.

#### CAUTION

Ensure that you route the thermal snap-switch cable away from hot surfaces of the pump or other equipment. If you do not, the cable may be damaged.

Connect the output of the warning thermal snap-switch to your control equipment to provide an indication that the pump is too hot.


You must connect the output of the shut-down thermal snap-switch to the electrical-overload control-loop of your contactor, so that the contactor will automatically switch off the pump if it is too hot: refer to [Figure 3](#).

The thermal snap-switches will reset (that is, close again) when the pump cools down to a preset temperature (refer to [Section 2](#)). You must therefore ensure that your control equipment incorporates a manual reset device so that the pump does not automatically switch on again when it cools down.

Use the following procedure to connect to the thermal snap-switches. If you connect to the thermal snap-switches as described below, the outputs from the thermal snap-switches will be normally closed and will open when the pump is too hot.

1. Refer to [Figure 4](#). Undo and remove the four screws (3) which secure the cover (2) to the thermal snap-switch box (1), then remove the cover.
2. Remove the plastic bag from inside the box, then open the bag; this bag contains the crimp connectors and insulators you will use to connect to the snap-switches.
3. Pass a suitably rated four-core cable through the cable-gland (5).
4. Fit the crimp connectors to the ends of the four wires in the cable (4), then fit the insulators around the connections.
5. Fit the crimp connectors on one pair of wires (11) to the spade terminals (10) of the shut-down thermal snap-switch (9).
6. Connect the other ends of the same pair of wires to the electrical-overload loop of your contactor.
7. Fit the crimp connectors on the remaining pair of wires (6) to the spade terminals (7) on the warning thermal snap-switch (8).
8. Connect the other ends of the same pairs of wires to the warning circuit of your control equipment.
9. Tighten the cable-gland (5) to secure the cable in position.
10. Refit the cover (2) and secure with the four screws (3).

Figure 4 - Connect to the thermal snap-switches

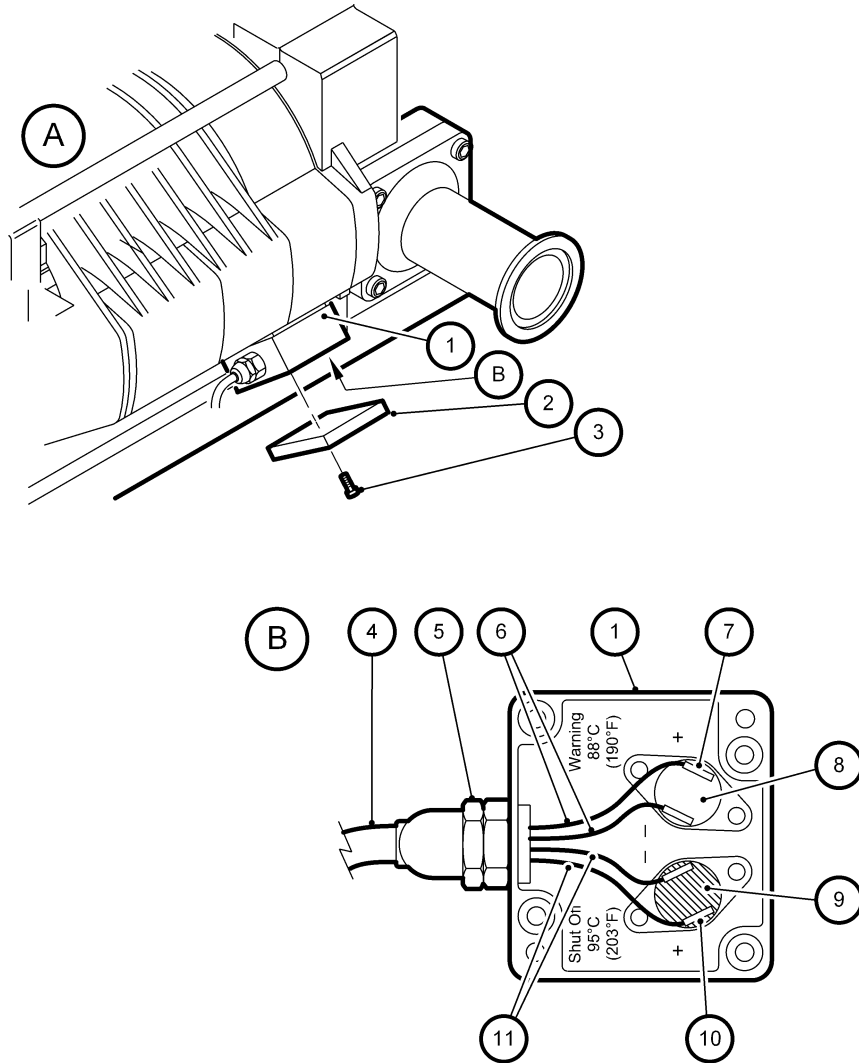

- |                            |                                  |
|----------------------------|----------------------------------|
| 1. Thermal snap-switch box | 7. Spade terminals               |
| 2. Cover                   | 8. Warning thermal snap-switch   |
| 3. Bolts (4 off)           | 9. Shut-down thermal snap-switch |
| 4. Four-core cable         | 10. Spade terminals              |
| 5. Cable-gland             | 11. Shut-down wires              |
| 6. Warning wires           |                                  |

dcx/8952/012

### 3.6 Check the direction of pump rotation



#### WARNING

You must ensure that the direction of rotation of the pump is correct before you operate the pump. If you do not, and the pump direction of rotation is incorrect, the inlet pipeline will be pressurised and may be damaged and there will be a risk of injury to people or explosion or fire.

**Note:** If you cannot easily see the cooling-fan to determine its direction of rotation, watch the blanking-plate on the pump inlet; if the blanking-plate lifts from the inlet when you switch on the pump, the direction of rotation is incorrect.

1. Refer to [Figure 1](#). Loosen the bolts which secure the blanking-plate to the pump-inlet (11), so that the blanking-plate is free to move, but so that it cannot come off of the inlet. Remove the blanking-cap from the pump outlet (6).
2. Watch the cooling-fan (4), switch on the pump for one or two seconds, then switch the pump off.
3. If the cooling-fan does not rotate in the correct direction shown by the arrow (3) on the pump-motor, the direction of rotation is incorrect. If the direction of rotation is incorrect:
  - Isolate the pump from the electrical supply.
  - Reverse any two of the electrical supply phase-wires in the pump-motor terminal-box: refer to [Section 3.5](#).
  - Repeat [Step 2](#) and [3](#) to ensure that the direction of rotation is now correct.

### 3.7 Fit a mechanical booster pump (optional)

If you want to use a mechanical booster pump with the GV pump, fit it now. Details of the connection kits available from Edwards are given in [Section 7.4.2](#). Refer to the installation procedures in the instruction manual supplied with the connection kit.

### 3.8 Connect the cooling-water supply

**Note:** The following procedure assumes that you use the GV pump with direct cooling, as supplied. If you want to use indirect cooling on the GV pump, install an Indirect Cooling Kit (refer to [Section 7.4.3](#)) and connect to the cooling-water supply as described in the instruction manual supplied with the Kit.

Take note of the following when you connect the cooling-water supply and return pipelines:

- If you need to connect more than one GV pump to the water supply, you must connect them in parallel and not in series.
- We recommend that you incorporate a suitable ball-type flow indicator in your water return pipeline, to provide a visual indication of cooling-water flow through the GV pump.
- We recommend that you incorporate a suitable filter in the water supply pipeline, if the water supply contains particulates.
- To prevent damage to the pump in the event of cooling-water supply failure or a blockage in the pump, we recommend that you incorporate a suitable flow-switch in the cooling-water return pipelines; you can connect the outputs of the flow-switch to your control equipment to shut down the pump when the cooling-water flow through the pump is too low.

Connect the cooling-water supply as described below; you must use 1/2 inch outside diameter pipes for the cooling-water supply and return pipelines.

1. Refer to [Figure 1](#). Remove the red blanking-plug from the cooling-water inlet (17) and remove the red blanking-cap from the cooling-water outlet (12).
2. Remove the 1/2 inch Swagelok compression nut and ferrule from the fittings kit and fit finger-tight onto the cooling-water outlet (12).
3. Fit the end of your cooling-water return pipeline to the Swagelok compression fitting on the cooling-water outlet (12), then tighten the Swagelok compression nut to secure the pipeline in place.
4. Fit the end of your cooling-water supply pipeline to the Swagelok compression fitting on the cooling-water inlet (17), then tighten the Swagelok compression nut to secure the pipeline in place.

## 3.9 Connect the shaft-seals purge and gas-ballast gas supplies

### 3.9.1 Introduction

You must determine the correct shaft-seals purge and gas-ballast requirements for your application. You must connect nitrogen supplies to the gas systems if you want to pump dangerous gases.

If nitrogen shaft-seals purge and gas-ballast is not required for your application, use the procedure in [Section 3.9.2](#) to connect a compressed air supply to the shaft-seals purge inlet. As supplied, the gas-ballast system can deliver filtered atmospheric air to the pump gas-ballast inlet, so you do not need to connect an air supply to the gas-ballast system.

If required for your application, connect nitrogen supplies to the shaft-seals inlet and to the gas-ballast system. Use the procedures in [Section 3.9.2](#) and [3.9.3](#) to connect nitrogen supplies to the shaft-seals purge inlet and to the gas-ballast system.

### 3.9.2 Connect the shaft-seals purge air or nitrogen supply



#### WARNING

If you want to pump dangerous gases, fit a suitable closed-circuit nitrogen supply to the shaft-seals purge inlet, to prevent the escape of dangerous gases from the pump.

#### CAUTION

Your compressed air or nitrogen supply pressure must comply with the requirements of [Section 2.3](#). If it does not, the shaft-seals purge pipeline may become over-pressurised and the shaft-seals may fail.

**Note:** Your compressed air or nitrogen gas supply must be clean and dry.

We recommend that you install suitable pressure control devices, a pressure gauge, and an automatically operated isolation-valve in your compressed air or nitrogen supply configured so that:

- The shaft-seals purge air or nitrogen supply is on whenever the pump is on.
- If you connect a nitrogen supply, the nitrogen supply is off whenever the pump is off.
- Whenever the shaft-seals purge air or nitrogen supply is on, you must maintain the pressure to the shaft-seals as specified in [Section 2.3](#).

Use the following procedure to connect your shaft-seals purge air or nitrogen supply; you must use a rigid metal (such as stainless steel) pipeline with an outside diameter of 1/4 inch for your air or nitrogen supply pipeline.

1. Refer to [Figure 1](#). Remove the blue blanking cap from the shaft-seals purge inlet (18).
2. Remove the 1/4 inch Swagelok nut and ferrule from the fittings kit and fit finger-tight onto the shaft-seals purge inlet connection (18).
3. Fit the end of your air or nitrogen supply pipeline to the shaft-seals purge inlet connection (18), then tighten the Swagelok compression nut to secure the pipeline in place: refer to [Appendix A1](#).

### 3.9.3 Connect a nitrogen gas-ballast supply (optional)



#### WARNING

If you want to pump dangerous gases, fit a suitable non-venting (to atmosphere) nitrogen supply to the gas-ballast system, to prevent the escape of dangerous gases from the pump.

**Note:** Ensure that the gas-ballast nitrogen supply is clean and dry.

*Your nitrogen supply pipeline must terminate in a 1/4 inch BSP female fitting, to enable you to connect it to the gas ballast inlet.*

If required for your application, you can connect a non-venting (to atmosphere) nitrogen gas-ballast supply to the pump. You must connect a non-venting (to atmosphere) nitrogen gas-ballast supply to the pump if you want to pump dangerous gases.

When you connect a nitrogen supply to the gas-ballast system, we recommend that you incorporate a suitable pressure gauge in the nitrogen supply pipeline.

Use the following procedure to connect a nitrogen supply to the gas-ballast system:

1. Refer to [Figure 1](#). Remove the air filter (15) from the gas-ballast inlet (14).
2. Use suitable fittings to connect your nitrogen supply pipeline to the gas-ballast inlet (14).

### 3.10 Connect the pump-inlet and pump-outlet



#### WARNING

Take all necessary safety precautions when you pump toxic, flammable or explosive gases. If you do not, there will be a danger of injury or death to people.



#### WARNING

Ensure that your system can provide adequate gas-ballast and/or inlet purge to dilute toxic, flammable or explosive gases to safe limits. If you do not, there will be a risk of emission of hazardous gases.



#### WARNING

When the pump is switched off, gas will flow in reverse direction through the pump and there will be a rapid pressure rise in the inlet pipeline and your process system. If this will cause a dangerous situation (or if it will adversely affect your process), you must incorporate suitable devices (such as a fast-acting inlet isolation-valve or an outlet check-valve) in your system pipelines.

#### 3.10.1 Connect the pump to your process system

When you connect the pump to the process system:

- Support process pipelines to stop the transmission of stress to pipeline joints.
- Use a flexible connection in the pipeline from the process system to the pump to reduce vibration and stress in the system pipelines.
- You must be able to isolate the pump from the atmosphere and from your process system if you have pumped or produced dangerous chemicals.
- On very dusty applications, incorporate an inlet filter in the inlet pipeline, to minimise the ingress of dust into the pump.
- To get the best pumping speed, ensure that the pipeline which connects the process system to the pump is as short as possible and has an internal diameter not less than the pump-inlet.
- Do not allow debris to get into the pump during installation. Ensure that debris (such as weld slag) cannot get into the pump during operation.
- If necessary, contact Edwards or your supplier for advice on inlet isolation-valves, outlet check-valves or other components suitable for your application and system design.

Use the following procedure to connect the inlet of the GV pump to your process system. This procedure assumes that a mechanical booster pump has not been fitted. If a mechanical booster pump has been fitted, use the instructions given in the appropriate instruction manual supplied with the mechanical booster pump.

1. Refer to [Figure 1](#). Undo and remove the bolts which secure the blanking-plate to the pump-inlet (11) and remove the blanking-plate. Retain the bolts.
2. Use the trapped O-ring (fitted to the pump-inlet) to connect the pump-inlet (11) to your vacuum system; secure with the bolts retained in [Step 1](#).



### 3.10.2 Connect the pump-outlet



#### WARNING

Pipe the exhaust to a suitable treatment plant to prevent the discharge of dangerous gases or vapours to the surrounding atmosphere.



#### WARNING

Incorporate safety devices to prevent operation of the pump when the exhaust pipeline is restricted or blocked. If you do not, the exhaust pipeline may become over-pressurised and may burst.

#### CAUTION

Install an outlet catchpot to prevent the drainage of condensate back into the pump. If you do not, condensate which drains back into the pump may damage it or cause it to seize.

Your exhaust pipeline system must be designed so that the pressure in the pipeline during pump operation is less than 1.3 bar absolute ( $1.3 \times 10^5$  Pa, 975 torr). If the pressure in the pipeline is higher than this pressure, the pump will operate at a high temperature and may trip because of excessive electrical current consumption.

Incorporate flexible bellows in the exhaust pipeline to reduce the transmission of vibration and to prevent loading of coupling-joints. If you use flexible bellows, you must ensure that you use bellows which have a maximum pressure rating which is greater than the highest pressure that can be generated in your system, and which can withstand the maximum temperatures that can be generated by your process conditions.

Use the following procedure to connect the pump-outlet to your exhaust pipeline:

1. Refer to [Figure 1](#). Remove the blanking-cap from the pump-outlet (6).
2. Use the NW40 clamping ring and trapped O-ring supplied in the fittings kit to connect the pump-outlet (6) to your exhaust pipeline.

### 3.11 Leak test the installation



#### WARNING

Leak-test the system after installation and maintenance and seal any leaks found to prevent the leakage of dangerous substances out of the system and leakage of air into the system.

Leak-test the system after installation and seal any leaks found. Substances which leak from the system may be dangerous to people and there may be a danger of explosion if air leaks into the system.

When supplied, the leak rate of the pump is tested to be less than  $1 \times 10^{-3}$  mbar. $\text{ls}^{-1}$  ( $1 \times 10^{-1}$  Pa. $\text{ls}^{-1}$ ,  $2.1 \times 10^{-6}$  atm. $\text{ft}^3$ . $\text{min}^{-1}$ ). The required leak rate for your system will depend on your safety and process requirements.

### 3.12 Commission the pump

**Note:** To check the operating temperature of the pump, measure the temperature of the pump at the point shown in *Figure 1*, item 7.

1. Isolate the pump from your process system.
2. Ensure that the gas-ballast flow valve (*Figure 1*, item 13) is closed.
3. Turn on the cooling-water supply, the shaft-seals purge air or nitrogen supply, the gas-ballast nitrogen supply (if fitted) and your exhaust-extraction system. Ensure that the pressures and flow rates are as specified in [Section 2.3](#).
4. Check that there are no leaks in the water, air, nitrogen (if fitted) and exhaust-extraction system connections. Seal any leaks found.
5. Switch on the pump.
6. Check that the pressure shown on your shaft-seals purge air or nitrogen pressure gauge is as specified in [Section 2.3](#). If necessary, adjust the pressure of the air or nitrogen supply.
7. Leave the pump to operate for approximately 15 minutes to allow the pump operating temperature to stabilise.
8. Check that the pump operating temperature is in the range 30 to 45 °C (86 to 113 °F); if the pump operating temperature is outside this range, refer to [Section 5.12](#).
9. Turn off the pump, the cooling-water supply, the shaft-seals air or nitrogen purge supply and the gas-ballast nitrogen supply (if fitted).

## 4 Operation



### WARNING

During operation, some parts of the pump become hot; these areas are identified by 'hot surface' labels (refer to [Section 1.1](#)). Do not touch these areas of the pump and avoid accidental contact between these areas of the pump and electrical cables and wires, and so forth.



### WARNING

Do not operate the pump with the pump-inlet or pump-outlet open to atmosphere. If you do, there will be a danger of injury or death from the rotating mechanisms, from the exposure to vacuum, or from hot exhaust gases.

The procedures in the following sections assume that you have a pump-inlet isolation-valve fitted to your pump.

### 4.1 Start the pump

#### CAUTION

Allow the pump to warm up and use full gas-ballast and inlet purge (if fitted) before you pump condensable vapours. If you do not, the vapours may condense in the pump and corrode or damage the pump.

Use the procedure below to start the pump.

1. Check the gearbox oil-level in the sight-glass on the side of the pump: refer to [Section 3.4](#).
2. Turn on your cooling-water supply, then bleed the trapped air from the water jacket:
  - Remove the air bleed plug ([Figure 1](#), item 20).
  - When the water level reaches the top of the plug hole, refit the air bleed plug.
3. Turn on the shaft-seals purge air or nitrogen supply, gas-ballast nitrogen supply (if fitted) and exhaust-extraction system (if fitted).
4. Switch on the pump.
5. Continue at [Section 4.2](#) to check the purge pressures and flows

## 4.2 Check the purge pressures and flows



### WARNING

Ensure that you do not touch the pump-body when you adjust the gas-ballast flow valve. During operation, parts of the pump can become hot.

Do the following checks immediately after pump start and regularly during pump operation:

- Check that the pressure of your shaft-seals purge air or nitrogen supply is correct and adjust if necessary (refer to [Section 2.3](#)).
- If fitted, check that the pressure of your gas-ballast nitrogen supply is correct and adjust if necessary.
- If necessary, adjust the gas-ballast flow valve ([Figure 1](#), item 13) to achieve the required gas-ballast flow into the pump:
  - Turn the adjuster knob clockwise to reduce the gas-ballast flow; turn the knob fully clockwise to switch off gas-ballast flow.
  - Turn the adjuster knob anticlockwise to increase the gas-ballast flow.

## 4.3 Shut down the pump

### CAUTION

Purge the pump before you shut it down. If you do not, process vapours may condense in the pump and corrode or damage it.

**Note:** *If you want to shut down the pump for a long time in an environment where the temperature is close to freezing, we recommend that you drain the cooling-water from the pump to prevent damage to the pump: refer to [Section 6.1](#).*

1. Isolate the pump-inlet from the process gases.
2. Refer to [Figure 1](#). Purge the pump of contaminants: operate the pump with full gas-ballast (that is, with the gas-ballast flow valve (13) open) for at least 15 minutes. Alternatively, use one of the following methods:
  - Operate the pump at or close to atmospheric pressure for at least 15 minutes; this is the recommended method for dusty processes.
  - Operate the pump with full inlet purge (if fitted) for at least 15 minutes.
3. Close the gas-ballast flow valve (10), or switch off inlet purge (if fitted).
4. Switch off the pump.
5. When the pump has cooled down, turn off the cooling-water supply.
6. Switch off the shaft-seals purge nitrogen supply (if fitted).

## 5 Maintenance

### 5.1 Safety



#### WARNING

Obey the safety instructions given below and take note of appropriate precautions. If you do not, you can cause injury to people and damage to equipment.

- A suitably trained and supervised technician must maintain the pump.
- Ensure that the maintenance technician is familiar with the safety procedures which relate to the synthetic oils and greases used and the products pumped. Wear the appropriate safety-clothing when you come into contact with contaminated components, grease and pump oil. Dismantle and clean contaminated components inside a fume-cupboard.
- Use suitable lifting equipment and wear safety shoes when you replace the pump-motor or the pump module.
- Allow the pump to cool to a safe temperature before you start maintenance work.
- Isolate the pump and other components in the process system from the electrical supply so that they can not be operated accidentally.
- Recheck the pump rotation direction if the electrical supply has been disconnected.
- Do not reuse O-rings or gaskets if they are damaged.
- Protect sealing-faces from damage.
- Do not touch or inhale the thermal breakdown products of fluorinated materials which may be present if the pump has overheated to 260 °C (500 °F) and above. These breakdown products are very dangerous. The pump may have overheated if it was misused, if it malfunctioned, or if it was in a fire. Edwards Material Safety Data Sheets for the fluorinated materials used in the pump are available on request: contact your supplier or Edwards.
- Leak-test the system after installation work is complete and seal any leaks found to prevent leakage of dangerous substances out of the system and leakage of air into the system: refer to [Section 3.11](#).

### 5.2 Maintenance plan

The plan in [Table 11](#) details the maintenance operations we recommend to maintain the pump in normal operation. Instructions for each operation are given in the section shown. In practice, the frequency of maintenance is dependent on your process. In clean processes, you may be able to decrease the frequency of maintenance operations; in harsh processes you may have to increase the frequency of maintenance operations. Adjust the maintenance plan according to your experience.

Table 11 - Maintenance plan

Operation	Frequency	Refer to Section
Check the gearbox oil level and fill the gearbox with oil (if necessary)	Weekly	5.3
Inspect the gas-ballast system	Monthly	5.4
Inspect the pipelines and connections	3 Monthly	5.5
Change the gearbox oil and clean the oil-level sight-glass*	When you relubricate the high vacuum bearings or when contaminated, whichever occurs first <sup>† ‡</sup>	5.6
Relubricate the high vacuum bearings	When necessary**	5.7
Clean the cooling-jacket	Yearly or when necessary	5.8
Replace the gas ballast filter	Yearly or when necessary	5.9
Replace the pump-motor bearings	Every 35000 hours of operation	5.10
Overhaul the pump	3 Yearly	5.11

\* You must have a Routine Maintenance Kit (refer to Section 7.3) to do these maintenance operations.

† For maximum pump reliability, we recommend that you change the gearbox oil when you relubricate the high vacuum bearings: refer to Section 5.8.

‡ If the gearbox oil is contaminated (indicated by a change in colour of the oil, for example, water contamination will turn the oil a white colour), you must change the oil. You may be able to remove the contaminants from the oil by filtration.

\*\* The frequency of maintenance depends on the operating temperature of the pump: refer to Section 5.8.

### 5.3 Check the gearbox oil-level and fill the gearbox with oil (if necessary)

**Note:** If you need to pour oil into the gearbox frequently, or if there is a sudden loss of a large amount of oil, the pump may be faulty: shut down the pump and contact your supplier or Edwards.

Refer to Figure 1 which shows the location of the oil-level sight-glass on the pump. Check that the pump gearbox oil-level is at the MAX mark on the bezel of the oil-level sight-glass (16): refer to detail C. If the oil-level is below the MAX mark:

1. Refer to Figure 5. Remove the oil filler-plug (1) and O-ring (2) from the oil-filler port (3), fit a suitable funnel to the oil-filler port, then pour the oil through the funnel into the pump gearbox until the oil-level is at the MAX mark on the bezel of the oil-level sight-glass (refer to Figure 1, detail B). We recommend that you use the oil type specified in Section 2.5.1.
2. If you overfill the gearbox, use a suitable pump or syringe to suck oil out of the gearbox; when the oil level reaches the MAX mark on the sight-glass (refer to Figure 1, detail B), refit and tighten the oil drain-plug and O-ring (11); continue at Step 1 again, to check that the oil-level is now correct.
3. Refit the oil filler-plug (1) and O-ring (2) to the oil-filler port (3) and tighten.

## 5.4 Inspect the gas-ballast system


Use the following procedure to inspect the gas-ballast system. Note that if you have not connected a nitrogen gas-ballast supply, you must replace the gas-ballast air filter every year (refer to [Section 5.9](#)). However, you may need to replace the air filter more frequently if you use the GV pump in an environment where there are excessive air-borne particulates; refer to [Section 7.3](#) for the Item Number for the routine maintenance kit, which contains a replacement air filter.

1. Refer to [Figure 1](#). If you have connected a nitrogen gas-ballast supply, continue at [Step 5](#), otherwise continue at [Step 2](#) to inspect the air filter.
2. Inspect the air filter (15); if there are excessive deposits lodged in the air filter, continue at [Step 3](#), otherwise continue at [Step 5](#).
3. Remove the air filter (15) from the gas-ballast inlet (14); dispose of the air filter.
4. Fit a new air filter (15) to the gas-ballast inlet (14).
5. Inspect all of the clamps in the gas-ballast system and check that they are secure: tighten any loose connections.

## 5.5 Inspect the pipelines and connections

1. Inspect all cooling-water pipelines and connections; check that they are not corroded or damaged. Replace any of the pipelines and connections that are corroded or damaged. Check that all cooling-water connections are secure. Tighten any connections that are loose.
2. Inspect all air or nitrogen supply pipelines and connections; check that they are not corroded or damaged. Replace any pipelines and connections that are corroded or damaged. Check that all air or nitrogen supply connections are secure. Tighten any connections that are loose.
3. Inspect all electrical cables; check that they are not damaged and have not overheated. Replace any cables that are damaged or have overheated. Check that all electrical connections are secure. Tighten any connections that are loose.
4. Inspect all process and exhaust pipelines; check that they are not corroded or damaged. Replace any pipelines that are corroded or damaged. Check that all process and exhaust connections are secure. Tighten any connections that are loose.

Figure 5 - Oil-level sight-glass and oil filler port

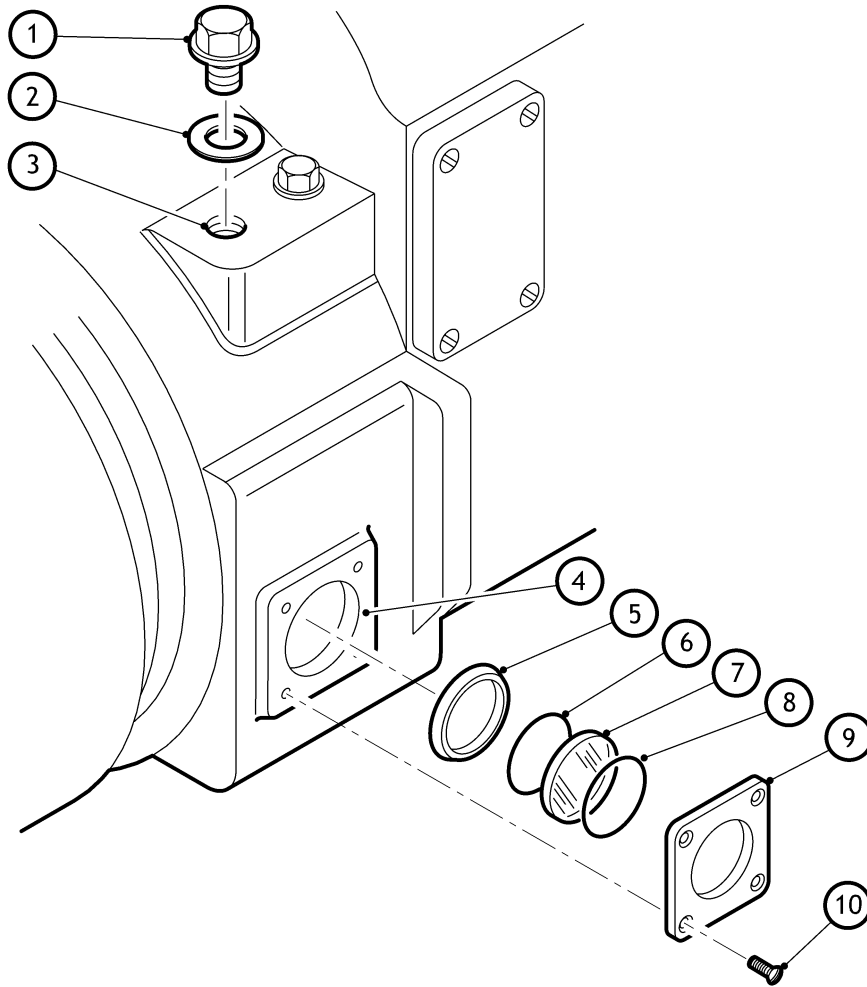

dcsl/8268/005

- |                        |                    |
|------------------------|--------------------|
| 1. Filler-plug         | 6. O-ring          |
| 2. O-ring              | 7. Sight-glass     |
| 3. Oil filler-port     | 8. O-ring          |
| 4. Sight-glass fitting | 9. Bezel           |
| 5. Compression ring    | 10. Screws (4 off) |



## 5.6 Change the gearbox oil and clean the oil-level sight-glass



### WARNING

Changing the oil in a pump from hydrocarbon to PFPE (Fomblin) could potentially cause a safety hazard. Fomblin pumps are generally used in hazardous applications which may involve the pumping of gases with high concentrations of oxygen. If hydrocarbon oil comes into contact with gases with an oxygen concentration greater than 25 %, an explosion can occur.

Therefore, if you want to convert a pump that has been used with hydrocarbon oil to use PFPE (Fomblin) oil, you cannot simply flush the pump with new PFPE oil. You must return the pump to an Edwards Service Centre for overhaul and cleaning by qualified Edwards service engineers. The change in oil type requires a complete strip down of the pump, and thorough cleaning of all parts, so that all traces of hydrocarbon oil are removed.



### WARNING

Ensure that you do not come into contact with the used pump oil. The used oil may be hot and can cause injury.

**Notes:** 1 *If the used oil drained from the pump is very discoloured, fill the gearbox with new oil then suck out the oil two or three times, until the oil which you suck out of the gearbox is clean.*

2 *New O-rings are included in the routine maintenance kit: refer to [Section 7.3](#).*


Refer to [Figure 1](#). You must clean the oil-level sight-glass (16) when you change the gearbox oil. Use the following procedure to clean each sight-glass.

1. Remove the oil filler-plug (1) and O-ring (2). Dispose of the O-ring (2).
2. Use a suitable pump or syringe to suck the used oil out of the gearbox.
3. Undo and remove the four M5 screws (10) from the sight-glass bezel (9).
4. Remove the bezel (9), O-ring (8), sight-glass (7), O-ring (6) and compression ring (5). Dispose of the O-rings.
5. Clean all of the sight-glass components and the sight-glass recess in the fitting (4) with a soft lint-free cloth. If necessary, use a suitable cleaning solution; if you use a cleaning solution, ensure that all of the solution is removed before you reassemble the sight-glass.
6. Refit the compression ring (5) in the sight-glass fitting (4).
7. Fit two new O-rings (6, 8) and the sight-glass (7), then fit the bezel (9) and secure with the four M5 screws (10).
8. Place a suitable funnel in the oil filler-port (3).
9. Pour new oil into the gearbox; allow the oil to drain into the gearbox and then check the level on the oil sight-glass (refer to [Section 5.3](#)). We recommend that you use the oil type specified in [Section 2.5.1](#).
10. Remove the funnel and refit the oil filler-plug (1) and O-ring (2) to the oil filler-port (3).
11. Dispose of the used oil safely: refer to [Section 6.2](#).

## 5.7 Relubricate the high vacuum bearings

1. Refer to [Figure 6](#). Undo and remove the six screws (6) which secure the bearing end-cover (5) to the high-vacuum head-plate (3).
2. Lift away the end-cover (5) and remove the O-ring (1). Dispose of the O-ring.
3. Use a clean lint-free cloth or a plastic or wooden spatula to remove as much old grease as possible from the end-cover (5) and bearings (2). Do not use your fingers for this operation.
4. Inspect the bearings (2) for obvious signs of wear or the presence of debris. If the bearings are worn, return the pump to an Edwards Service Centre for repair.
5. If the bearings are in a satisfactory condition, force new PFPE grease (supplied in the maintenance kit) into the bearings so that a smooth layer of grease covers the case and bearings: do not put grease into the bearing end-cover (5), and do not over-pack the bearings or the pump will run hot.
6. Apply a light wipe of PFPE grease to the new O-ring (1) and position the O-ring in its groove in the head-plate (3).
7. Refit the bearing end-cover (5) to the head-plate (3) and secure with the six screws (6).

Figure 6 - Relubricate the high vacuum bearings

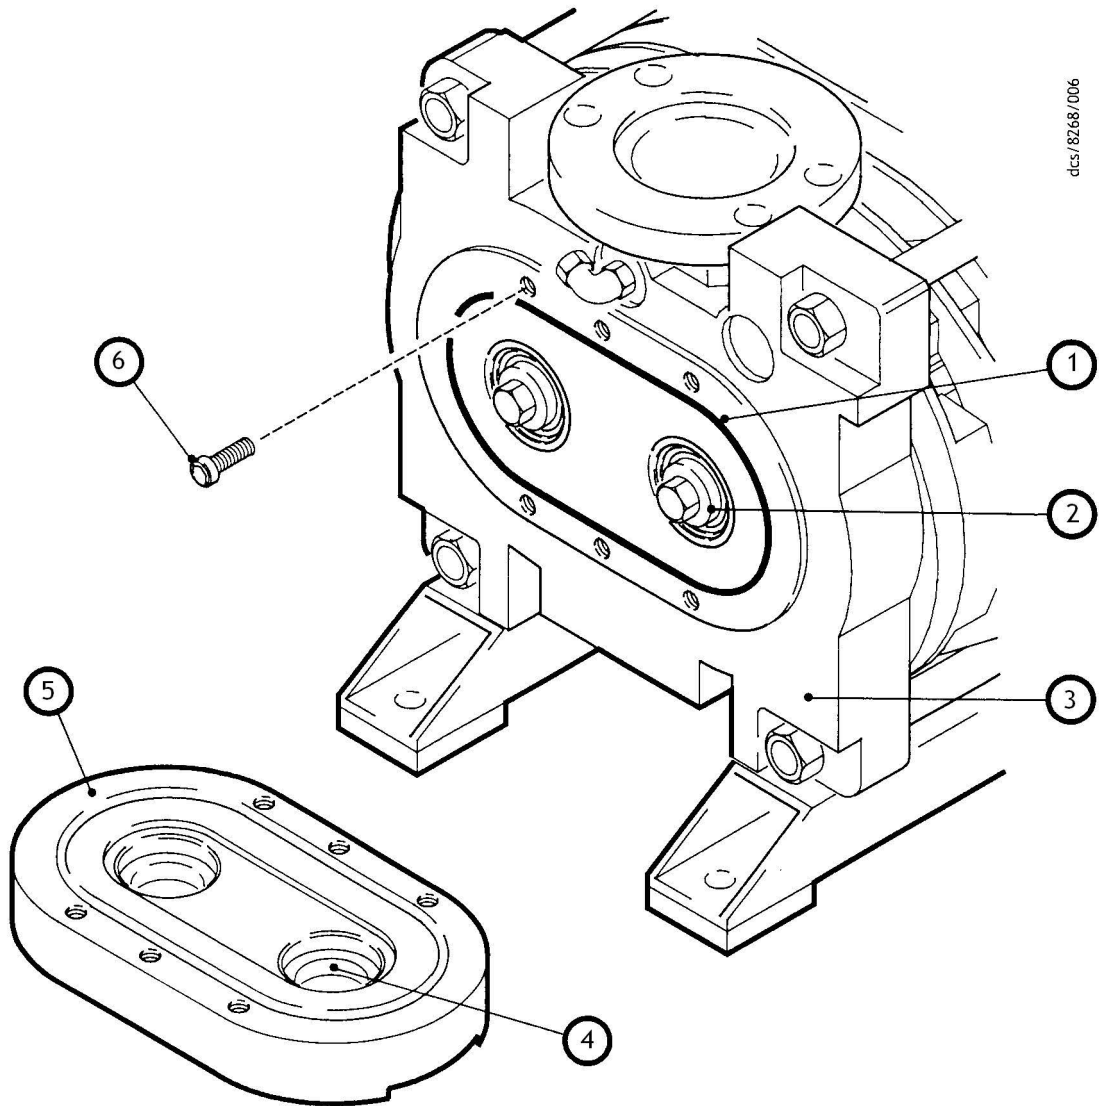

dics/8268/006

- |                           |                      |
|---------------------------|----------------------|
| 1. O-ring                 | 4. End-cover cavity  |
| 2. Bearing                | 5. Bearing end-cover |
| 3. High-vacuum head-plate | 6. Screw             |

## 5.8 Flush the cooling jacket



### WARNING

If the water flow through the cooling jacket is blocked or restricted, the water in the pump may get very hot. Allow the pump to cool down before you remove the cooling-water connections. If you do not, hot water may be ejected from the pump and may cause injury.

Flush the cooling jacket every year or when you think that the cooling efficiency is reduced because of deposits or other contamination in the cooling jacket. The pressure and flow rate of the water supply that you use to flush the cooling jacket must be equal to or higher than the normal cooling-water supply. Do not exceed the pressure specified in [Section 2.3](#).

1. Switch off your cooling-water supply.
2. Refer to [Figure 1](#). Disconnect the cooling-water supply and return pipelines from the water inlet (17) and outlet (12).
3. Fit a suitable water supply pipeline to the water outlet connection (12), and fit a suitable water return pipeline to the water inlet connection (17).
4. Turn on the water supply to flush the cooling jacket in the reverse direction, and wash out any deposits from the cooling jacket.
5. Allow the water to flow for a few minutes, switch off the water supply, then disconnect the water return pipeline.
6. Place a suitable splash tray under the cooling-water inlet connection (17), then unscrew and remove the 3/8 inch BSP water inlet fitting (that is, the fitting to which the cooling-water inlet connection is fitted).
7. Use a suitable tool to remove any sediments from the port.
8. Turn on the water supply for a short time to flush any remaining deposits from the cooling-jacket.
9. Disconnect the water supply pipeline from the cooling-water outlet connection (12), then dispose of the water and deposits in the splash tray.
10. Apply a suitable thread sealant (such as Loctite 577) to the threads of the 3/8 inch BSP water inlet fitting, then refit the fitting to the port in the end of the pump.
11. Refit your pump cooling-water supply and return pipelines to the water inlet (17) and outlet (12) connections.

## 5.9 Replace the gas ballast filter

1. Refer to [Figure 1](#). Unscrew and remove the air filter (15) from the gas-ballast inlet (14); dispose of the air filter.
2. Fit a new air filter (15) to the gas-ballast inlet (14); refer to [Section 7.3](#) for the Item Number for the routine maintenance kit, which contains a replacement air filter.

## 5.10 Replace the pump-motor bearings



### WARNING

Do not replace the pump-motor bearings unless you have been suitably trained in the necessary procedures. If you are not suitably trained, you may damage the motor and it may not operate correctly or safely.

You must only replace the pump-motor bearings if you have been suitably trained in all of the procedures required to remove and refit the motor, to dismantle and reassemble the motor, and to replace the motor bearings.

When you replace the pump-motor bearings:

- You will need a Motor bearing kit (Contact Edwards for kit information (refer to [Section 7.3](#))).
- Only use approved procedures to remove and refit the pump-motor, to dismantle and reassemble the pump-motor, and to replace the pump-motor bearings.
- You must lightly lubricate the new bearings with a suitable grease, such as:
  - BP LC2 Energrease
  - Esso N2 Unirex
  - Castrol LMX
  - Mobil HP Mobilgrease.
- To drive the bearings onto the rotor shaft, use a short length of suitable tube or a suitable drift to apply pressure only to the inner races of the bearings.

## 5.11 Overhaul the pump

We recommend that the pump is given a major overhaul every three years. Such an overhaul is outside the scope of this manual and should be done by qualified Edwards service personnel: contact your supplier or Edwards.

## 5.12 Fault finding

Table 12 - Fault finding

Symptom	Check	Action
The pump suddenly stops.	Is there a hydraulic lock in the pump?	Switch off and drain the fluid from the pump. If necessary, turn the pump by hand.
	Has the shut-down thermal snap-switch operated to stop the pump because the pump is operating at too high a temperature?	Check that there is a sufficient flow of cooling-water through the pump: check that the cooling-water supply is on, is at the correct pressure and is of the correct temperature.
	Has the cooling-water supply been interrupted, or has it failed?	If your cooling-water supply is on and is at the correct pressure and temperature, the cooling jacket may be blocked: clean the cooling jacket (refer to <a href="#">Section 5.8</a> ).
	Has the pump seized because the shut-down thermal snap-switch is faulty?	Check the operating temperature of the pump (at the position shown in <a href="#">Figure 1</a> , item 7). If the operating temperature is higher than 100 °C (212 °F), there has been insufficient cooling-water flow through the pump and the thermal snap-switch is faulty: contact your supplier or Edwards for advice.
	Has the pump seized due to deposits?	Switch off the pump and contact your supplier or Edwards.
The pump operates at too high a temperature or the pump temperature is unstable.	Is the cooling-water flow inadequate, is the flow variable, or is the flow being interrupted?	Before you restart the pump, check for correct cooling-water flow (see above).
The gearbox and oil are contaminated with the process substances pumped.	Has the shaft-seal purge failed?	<p>Check the pressure of the air or nitrogen purge flow to the shaft-seals; if necessary adjust the air or nitrogen pressure. Change the gearbox oil before you restart the pump (refer to <a href="#">Section 5.6</a>).</p> <p>If the shaft-seal purge has not failed, the internal pump seals may have failed. Contact your supplier or Edwards for advice.</p>
The gearbox is noisy.	Is the oil level low?	Check the oil level and fill as necessary (refer to <a href="#">Section 5.3</a> ).
The pump does not operate.	Is the pump-motor faulty?	Make all the other appropriate checks in this table. If there is no other apparent cause for failure of the pump to operate, the pump-motor may have failed: contact your supplier or Edwards.

## 6 Storage and disposal

### 6.1 Storage

**Note:** *If you want to store the pump in an environment with an ambient temperature below - 14 °C (7 °F), you must also drain the oil from the pump: use the procedure in [Section 5.6](#), then refit the oil drain-plug to the pump before you store it.*

Store the pump as follows:

1. Ensure that the pump has been shut down as described in [Section 4.3](#), then disconnect the pump from the electrical supply.
2. Refer to [Figure 1](#). Place a suitable container under the cooling-water inlet and outlet (17, 12), then remove your cooling-water supply and return pipelines from the connections and allow the cooling-water to drain from the pump.
3. Disconnect the shaft-seals purge air or nitrogen supply from the shaft-seals purge inlet (18). If fitted, disconnect the gas-ballast nitrogen supply from the gas-ballast system.
4. Disconnect the pump inlet (11) and outlet (6) from your process and exhaust pipelines.
5. Fit blanking-plates to the pump-inlet (11) and pump-outlet (6). Place protective covers over the pump services connection points.
6. Store the pump in clean dry conditions until required.
7. When required for use, prepare and install the pump as described in [Section 3](#) of this manual.

### 6.2 Disposal

Dispose of the pump, cleaning solution, deposits removed from the pump, used pump oil, grease and any components (for example, the gas ballast filter) safely in accordance with all local and national safety and environmental requirements.

Take particular care with the following:

- Fluoroelastomers which may have decomposed as the result of being subjected to high temperatures.
- Components and oil which have been contaminated with dangerous process substances.

This page has been intentionally left blank.



# 7 Service, spares and accessories

## 7.1 Introduction

Edwards products, spares and accessories are available from Edwards companies in Belgium, Brazil, China, France, Germany, Israel, Italy, Japan, Korea, Singapore, United Kingdom, U.S.A. and a world-wide network of distributors. The majority of these centres employ Service Engineers who have undergone comprehensive Edwards training courses.

Order spare parts and accessories from your nearest Edwards company or distributor. When you order, please state for each part required:

- Model and Item Number of your equipment
- Serial number (if any)
- Item Number and description of the part.

## 7.2 Service

Edwards products are supported by a world-wide network of Edwards Service Centres. Each Service Centre offers a wide range of options including: equipment decontamination; service exchange; repair; rebuild and testing to factory specifications. Equipment which has been serviced, repaired or rebuilt is returned with a full warranty.

Your local Service Centre can also provide Edwards engineers to support on-site maintenance, service or repair of your equipment.

For more information about service options, contact your nearest Service Centre or other Edwards company.

### 7.2.1 Return the equipment or components for service

Before you send your equipment to us for service or for any other reason, you must send us a completed Declaration of Contamination of Vacuum Equipment and Components - Form HS2. The HS2 form tells us if any substances found in the equipment are hazardous, which is important for the safety of our employees and all other people involved in the service of your equipment. The hazard information also lets us select the correct procedures to service your equipment.

We provide instructions for completing the form in the Declaration of Contamination of Vacuum equipment and Components - Procedure HS1.

Download the latest documents from [www.edwardsvacuum.com/HSForms/](http://www.edwardsvacuum.com/HSForms/), follow the procedure in HS1, fill in the electronic HS2 form, print it, sign it, and return the signed copy to Edwards.

*If we do not receive a completed HS2 form, your equipment cannot be serviced.*

## 7.3 Spares and maintenance kits

Table 13 - Spares and maintenance kits

Spare / kit	Item Number
Mobil SHC 629 oil: 1 litre (0.26 US gallons)	H11023010
Mobil SHC 629 oil: 4 litres (1.32 US gallons)	H11023011
Routine maintenance kit	A70212825
Motor bearing kit	Contact Edwards for kit information

## 7.4 Accessories

A number of accessories are available for the GV pumps, as described in the following sections.

### 7.4.1 Exhaust silencer

Fit an exhaust silencer to attenuate the pulses in the exhaust pressure, and to reduce pump-induced resonance in your exhaust-extraction system.

Table 14 - Exhaust silencer

Accessory	Item Number
GV80/160 Exhaust Silencer	NCD089000

### 7.4.2 Booster connection kit

Use a Booster Connection Kit to allow you to fit an EH mechanical booster pump to the inlet of the GV pump.

Table 15 - Booster connection kit

Accessory	Item Number
GV80-EH250 Booster Connection Kit	A50559000
GV80-EH500A Booster Connection Kit	A50560000

### 7.4.3 Indirect cooling kit

**Note:** We recommend that you fit an Indirect Cooling Kit if you want to use the pump with an operating temperature in the range of 45 to 90°C, 113 to 194°F.

Fit an Indirect Cooling Kit to allow you to use indirect cooling on the GV pump.

Table 16 - Indirect cooling kit

Accessory	Item Number
GV80 Indirect Cooling Kit with TCV	A50563000

### 7.4.4 Acoustic enclosure

When fitted, the Acoustic Enclosure reduces the noise level emitted from the pump.

Table 17 - Acoustic enclosure

Accessory	Item Number
GV80 Acoustic Enclosure	A50575000

### 7.4.5 Other accessories

A number of other accessories are available for the GV pumps, as listed below; contact your supplier or Edwards for details of these accessories:

- Gas/water control system.
- Motor control module.

# Appendix A1 Correct use of Swagelok connectors

**Note:** We recommend that you use a second spanner to hold the connector in position when you connect or disconnect a Swagelok connector.

## A1.1 Fit a Swagelok connector


1. Refer to [Figure A1](#) detail A. Undo and remove the nut (4) from the Swagelok connector (1). Ensure that the front (tapered) ferrule (2) and the rear ferrule (3) are correctly orientated as shown in detail A, then loosely refit the nut (4) to the connector (1).
2. Refer to detail B. Insert the tube (5) through the nut (4) and into the Swagelok connector (1). Ensure that the tube rests firmly on the shoulder inside the fitting, and that the nut (4) is finger tight.
3. Tighten the nut (4) until you cannot rotate the tube (5). If you cannot turn the tube because of how it is installed, tighten the nut by 1/8th of a turn.
4. Refer to detail C. Mark the nut (4) at the six o'clock position.
5. Refer to detail D. Hold the body of the connector steady, then turn the nut (4) by 1 1/4 turns (to the nine o'clock position) to fully tighten the connection.

## A1.2 Reconnect a Swagelok connector

You can disconnect and reconnect a Swagelok connector many times and still obtain a correct leak-proof seal. Refer to [Figure A2](#) detail A which shows a Swagelok connector after you have disconnected it. Use the following procedure to reconnect it:

1. Refer to detail B. Insert the tube (5) with the swaged ferrules (2, 3) into the Swagelok fitting (1), until the front ferrule (2) is fully in the body of the fitting.
2. Refer to detail C. Tighten the nut (4) by hand.
3. Use a wrench or spanner to turn the nut (4) to its original position (you will feel an increase in resistance when the nut is in its original position), then tighten the nut slightly.


Figure A1 - Fit a Swagelok fitting

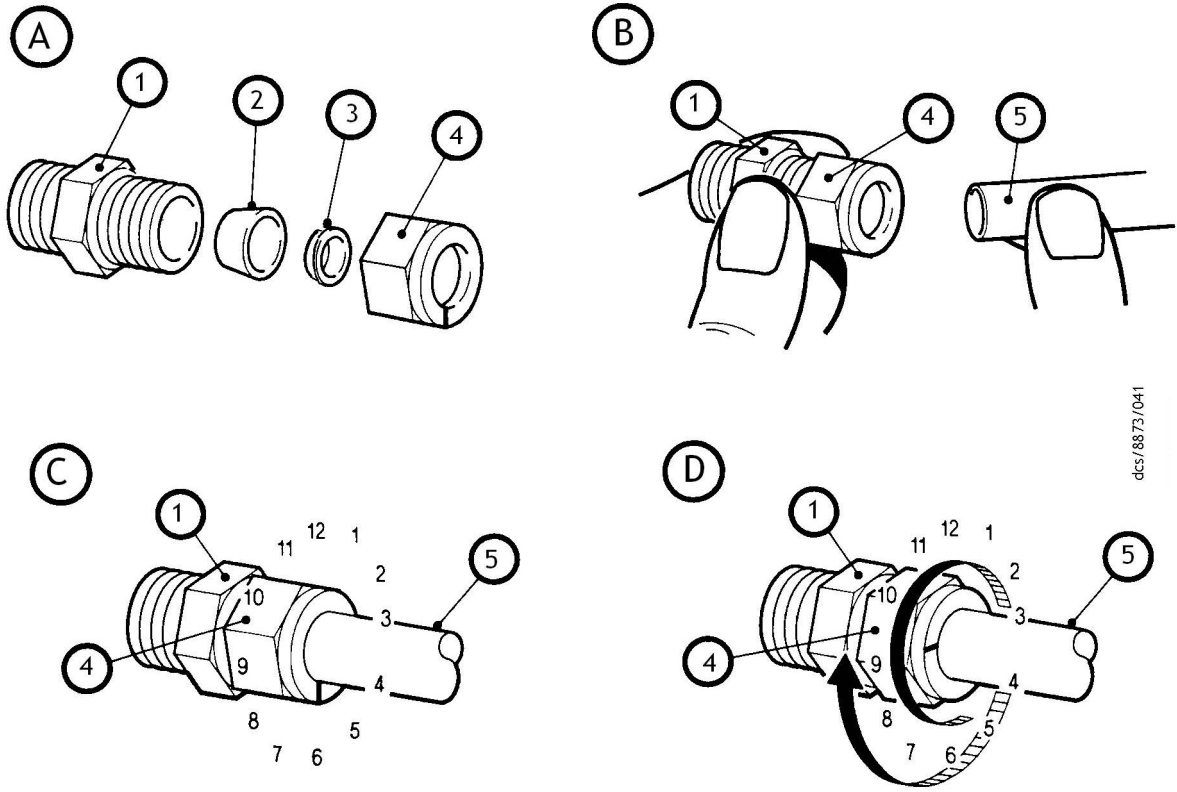

- 1. Swagelok connector
- 2. Front (tapered) ferrule
- 3. Rear ferrule
- 4. Nut
- 5. Tube

Figure A2 - Retighten a Swagelok fitting

dcsl8873/040

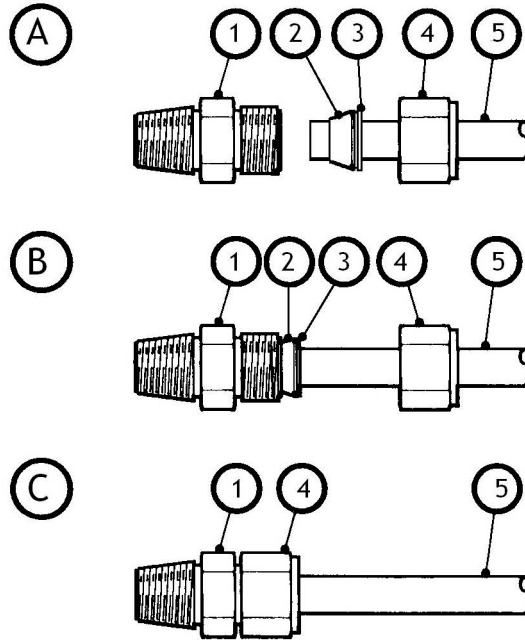

1. Swagelok connector
2. Front (tapered) ferrule
3. Rear ferrule
4. Nut
5. Tube

This page has been intentionally left blank.

This page has been intentionally left blank.

